

Turbo-Cool Sump Update, MV1727A

Drain Plug to Pipe Cap

The P/N 38476 1.5" Mechanical Gripper Plug shown in the Turbo-Cool Installation Manual has been replaced with a P/N 47939 1.5" Rubber Pipe Cap.

1. Decide which side of the Sump will be used for the drain and cut off that end. Make cut for one drain only.
2. Slide the 1.5" Rubber Pipe Cap P/N 47939 over the drain outlet and tighten the worm gear clamp until snug (see photo below). Caution: Do not over tighten clamp. Clamp may strip out or collapse the drain tube.

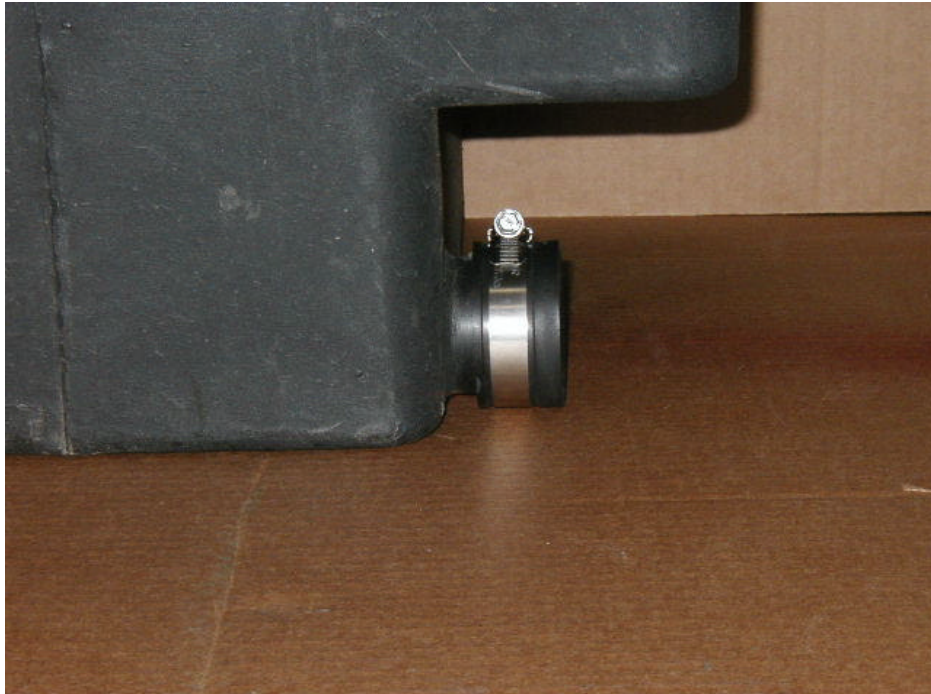


Figure 1